

Instructions for installation
Pillar IKI 7,5 kW, 9 kW and 10 kW
Finlandia Control unit

Affixing the sensor to the ceiling:
distance from heater frame 100–400 mm

The temperature sensor should be installed no
less than 1000 mm from an undirected air vent income,
or less than 500 mm from a directed air vent.

